


CALIBRATING WITH THERMOCOUPLE SIMULATORS

A common practice in thermocouple transmitter calibration is to set the 4 to 20 mA range on the bench before installation. The usual procedure is to employ a thermocouple simulator which can be programmed to produce a thermocouple equivalent signal of the desired type and temperature range. In this fashion, the 4 mA is set with the ZERO, and the 20 mA with the SPAN for the desired range.

Bench calibration of a transmitter can be performed to operate with any IRt/c by adding the following step to the normal method:

- Measure the electrical resistance of the IRt/c to be used with the transmitter, and add a resistor of the same value in series with the simulator.

With this step, the simulator “looks” to the transmitter exactly the same as the IRt/c, and any offsets caused by transmitter leakage currents can be calibrated out. Good practice is to check to make sure that the calibration remains stable on the bench, in case the transmitter leakage current is not constant. As always with infrared devices, a final trim calibration should be performed in actual operation (see Tech Note #1).

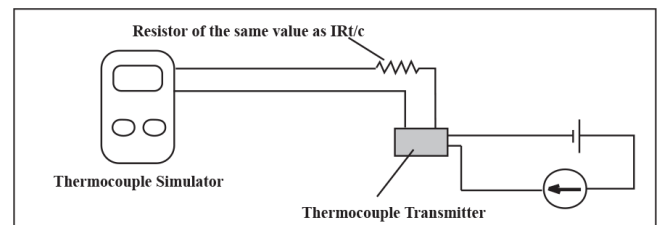

Exergen Corporation office:

USA
400 Pleasant Street
Watertown, MA 02472
Tel: +1 617 923 9900 press 4 for industrial
Fax: +1 617 923 9911

Exergen Industrial International/OEM Sales office:

Clever IR
The Netherlands
Pastoor Clercxstraat 26
5465 RH Veghel
Tel: +31 (0)413 376 599

industrial@exergen.com
www.exergen.com