

## CHECKING CALIBRATION OF IRT/c OR D-SERIES WITH BOILING WATER

Exergen's Microscanner D-Series are designed as highly accurate and reliable temperature references as well as fast easy-to-use infrared scanners. Since all components making up a D-Series are drift-free *there is never a requirement to calibrate the instrument once it leaves the factory*, and no calibration means is provided on the instrument (except certain high temperature models). Accordingly, if the D-Series calibration has shifted from its factory setting, it requires repair since a component has failed. Similarly, non-adjustable IRT/c models are factory calibrated for life, and if they do not reproduce their calibration, they should be considered failed.

Unless you have technical experience with and have a laboratory infrared "blackbody," this calibration checking technique is recommended by the factory. Boiling water is a physical constant, easily used, and requires no technical set-up of elaborate equipment or checking of traceable standards.

### Boiling Point of Water

The open boiling point of (reasonably pure) water is affected by only one factor: barometric pressure. The standard 212°F (100°C) boiling point is for a barometric pressure of 30.00 inches of Hg (mercury), or in metric terms, 1 Bar (1000 millibars). This is "normal" at sea level. Barometric pressure can be affected by elevation above sea level, and by weather conditions.

**Elevation Correction:** The boiling point of water is lowered by approximately 2°F (1°C) for every 1000 ft (300 m) above sea level with no unusual weather conditions. If your weather is "normal" and you are not using the barometric pressure method,

you can simply use the following corrections.

Elevation	Boiling Temperature	
Sea level	212°F	100°C
1000 ft (300 meters)	210	99
2000 ft (600m)	208	98
3000 ft (900 m)	206	97
4000 ft (1200 m)	204	96
5000 ft (1500 m)	202	95

**Weather Conditions:** If you use this method, you do not need to put in a correction for elevation above sea level. It will be automatic by using the current barometric pressure dominating your area. Barometric pressure can be much lower during especially stormy conditions (low pressure areas), and much higher during extremely cool and dry conditions (high pressure areas). Consult the weather reports on TV, in your local newspaper, or call a weather service office for current barometric conditions in your area. Barometric pressure correction factors:

- 2°F / inch Hg (1°C / 30 millibars) change from 30.00 in. Hg (1 Bar)
- Add to the boiling temperature for higher than normal pressure.

**Note:** Always clean the sensor lens prior to calibration testing. A cotton swab with a mild cleaner such as alcohol works well.

- Subtract for lower than normal pressures.

### Checking Calibration

**Required Equipment:**

- Metal pot with cover, minimum 4" (10 cm) tall.
- Solid paint marker or thin opaque tape.

Exergen Corporation office:

USA  
400 Pleasant Street  
Watertown, MA 02472  
Tel: +1 617 923 9900 press 4 for industrial  
Fax: +1 617 923 9911

Exergen Industrial International/OEM Sales office:


Clever IR  
The Netherlands  
Pastoor Clercxstraat 26  
5465 RH Veghel  
Tel: +31 (0)413 376 599

industrial@exergen.com  
www.exergen.com

TN-075-1-EN

## CHECKING CALIBRATION OF IRt/c OR D-SERIES WITH BOILING WATER

1. Use a metal pot, with cover, for boiling water.
2. Fill the pot at least 1/2 fill with water.
3. Use the solid paint marker supplied with your DSeries, or a piece of opaque (non-see through) tape, or a thin electrical tape, to put a measuring spot at least 1in. (25 mm) in diameter on the outside surface of the pot. Make sure the measuring spot is at, or slightly below, the water level.
4. Bring the water to a RAPID boil. Tilt the cover SLIGHTLY so that the water does not boil over. The condensing steam on the inside of the pot along with the rapidly boiling water will force the outside surfaces of the pot to be within a fraction of a degree of the temperature of the boiling water. (The temperature drop through the wall thickness of the average pot for boiling water is very small and can be ignored.)
5. Briefly touch the nosepiece flat onto the black mark and note the temperature reading. For an IRt/c, bring the sensor as close as possible without touching.

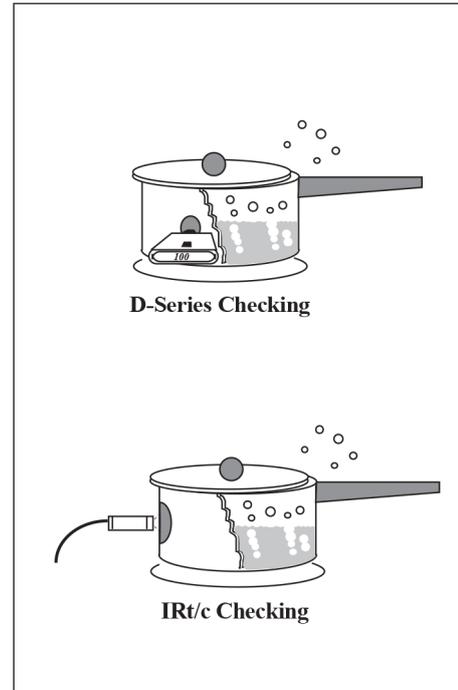

The reading should be within  $\pm 2\%$  of the actual boiling point (for example  $\pm 2^\circ\text{C}$  for  $100^\circ\text{C}$  boiling point). If the reading is not within these limits, the instrument has a failed component and should be returned to Exergen for repair. Please call for an RMA number prior to shipment. For the IRt/c refer to *Tech Note No. 73* for specifications.

### Exergen Corporation office:

USA  
400 Pleasant Street  
Watertown, MA 02472  
Tel: +1 617 923 9900 press 4 for industrial  
Fax: +1 617 923 9911

### Exergen Industrial International/OEM Sales office:

Clever IR  
The Netherlands  
Pastoor Clercxstraat 26  
5465 RH Veghel  
Tel: +31 (0)413 376 599

industrial@exergen.com  
www.exergen.com